



HOW LONG DOES IT TAKE TO CLEAN TENTS WITH A TEECO WASHING MACHINE?

We're dedicated to helping party rental companies run more efficiently. Investing in a Teeco washing machine allows your team to save hours on hand cleaning while returning tents to their wedding-white condition. Use this chart to calculate how Teeco can help you decrease the time it takes to properly clean tents.

Water Filling

After loading tents into the machine, the wash cycle begins by filling the drum with water. Teeco's machines are powered to fill quickly and efficiently.

	Full Load	Half Load
Classic	12 Minutes	6 Minutes
Signature	2 Minutes	1 Minute
Turbo	2.5 Minutes	1.25 Minutes
Premium	3 Minutes	1.5 Minutes

Wash Time

Once the machine is loaded and filled with water, it's ready to run. The time required to complete a wash cycle varies by the cleanliness of tents.

Level of Dirt

Wash Time

Light (mud, pollen, dust)	10 Minutes
Medium (tree sap, light mold)	20 Minutes
Heavy (gray from air pollution build-up after long-term installations)	30 Minutes

Drain Time

After the wash is complete, the machine must be drained. All Teeco models only require a few minutes of drain time.

Classic	2 Minutes
Signature	2 Minutes
Turbo	2.5 Minutes
Premium	3 Minutes

Extra Steps

Depending on the cleanliness of tents, additional rinse sequences may be required. This ensures that all dirt and chemicals are properly removed.

Amount of Dirt

Extra 10 Minute Rinse

Light	0
Medium	1 Rinse
Heavy	2 to 3 Rinses

For each rinse, add an additional fill and drain to total time.

Teeco's machines are built to wash tents quickly and efficiently. Our short cycle times allow you to spend time on more important tasks in your business, such as tearing down events and organizing your inventory.

Total Time

	+	+	=		
_____				_____	
Total Water Fill Time (in minutes)		Total Wash/Rinse Time (in minutes)		Total Drain Time (in minutes)	Minutes



(314) 968-3555



info@teecosolutions.com



teecosolutions.com